



Original Instructions in English language

OPERATING INSTRUCTIONS BMP-265 E/B

VERSION 2.3





Table of contents

Maintenance log	2
1. Introduction	4
2. Machine description	4
Accessories	5
3. Safety	6
3.1 Work area safety	6
3.2 Personal safety	6
3.3 Machine safety	7
3.4 Electrical safety	7
3.5 Petrol version safety	8
3.6 Dust collector safety	8
3.7 Maintenance safety	8
3.8 Transport safety	9
3.9 Signs on the machine	10
4. Initial operation	11
4.1 Checkpoints of electrical power supply	11
4.2 Checkpoints of the petrol engine	11
4.3 Checkpoints of the machine	12
4.4 Manual moving of the machine	12
4.5 Removing the drum	12
4.6 Mounting the drum	12
4.7 The scarifying drum	13
4.8 The scarifying flails and cutters	13
4.9 Control devices	14
5. Operating	15
5.1 Before starting up	15
5.2 Procedure to start work	15
5.3 Operating during scarifying	15
5.4 Switch off the machine	16
6. Maintenance	17
6.1 The scarifying drum	18
6.2 Adjusting the brake pressure	18
6.3 Belt drive	19
7. Troubleshooting	19
8. Technical data	20
Contact	



1. Introduction

Before use, operators must be provided with information, instruction and training for the use of the machine and the substances for which it is to be used, including the safe method of removal and disposal of the material collected. All persons who are working with or maintaining this machine must read the manual carefully and understand it fully. In case you sell the unit, hand it on to the next owner. Keep this manual always with the machine, to enable it to be referred to at any time. Any other work not covered by this operating manual must not be carried out.

This machine is designed for industrial use by professionals. Only authorized and trained personnel may operate this machine. This machine is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge. **Blastrac BV** offers a course on the use of the machine in order to make the operating and maintenance personnel familiar with all elements of the machine. Always use common sense when working with machines.

2. Machine description

The Blastrac scarifier BMP-265 can be supplied with a 400 volt electric motor or with a combustion engine. The intended use of this scarifier is to roughen up existing horizontal surfaces and removing coatings. It can be used on almost any surface (concrete, asphalt, stone and steel). The machine may not be used for other purposes. The manufacturer will not be liable for damage resulting from incorrect usage, in these cases the user assumes all risks.

The drum of the scarifiers revolves at +/- 1500 revolutions per minute. (RPM)

The depth of scarifying can be adjusted by the fine adjustment control on the handle of the machine; by this means it is possible to treat the surface with light or heavy cuts as is required.

The machine may not be used without an adequate dust extraction system. A specially designed Blastrac dust collection system ensures dust-free operation of the machine and clean air at the workspace.

Application

The scarifier is a very versatile machine and with the appropriate cutters it may be used for the following applications.

- To roughen concrete
- To clean most horizontal surfaces
- To remove coatings
- To corrugate concrete surfaces
- To remove road markings
- To make non-slip surfaces

The force of impact of a cutter is controlled by the depth adjustment. With the right depth adjustment, the best performance is obtained to give a desired result.

With a suitable Blastrac dust collector work can be carried out without causing excessive dust in the work area, this raises the life span of the machine and protects the health of the personnel.

For the BMP-265 B (Petrol engine)


Please read the enclosed OWNER'S MANUAL of the petrol engine before operating the machine.

The OWNER'S MANUAL contains important information about getting the best performance and safe operation of the petrol engine.

The OWNER'S MANUAL should be considered a permanent part of the engine and should remain with the engine if resold.



1	Lifting point	5	Quick lift lever
2	Dust hose connection	6	Deadman switch cord
3	Deadman switch	7	Brake handle
4	Fine adjustment	8	adjustable bolt for brake pressure

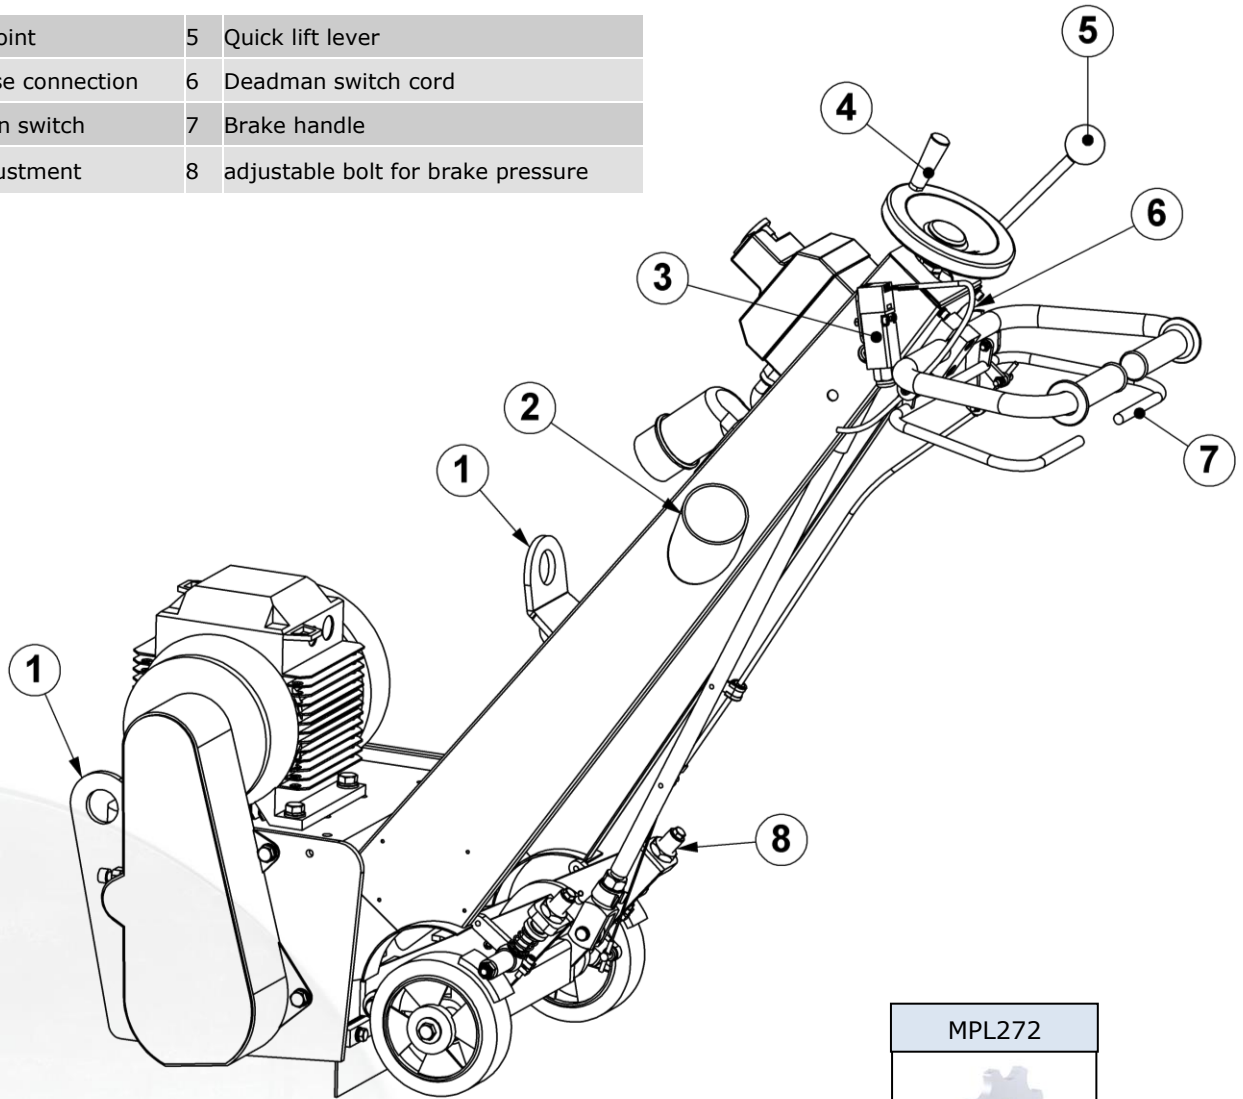




Accessories

The cutters for the BMP-265 are:

MPD265SL272S Drum complete with MPL272
 MPD265SL60S Drum complete with MPL60
 MPD265SL75S Drum complete with MPL75-1

MPL272SL265 Refill set MPL265
 MPL60SL265 Refill set MPL60
 MPL75SL265 Refill set MPL75-1

MPL272 Standard 8pt cutter
 MPL60 12 pt milling cutter
 MPL75-1 Milling cutter 6pt.

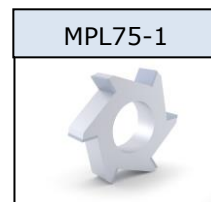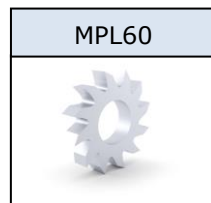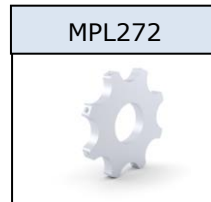



3. Safety



Warning!

Read all safety warnings and all instructions. Failure to follow the warnings and instructions may result in electric shock, fire, explosions and / or serious injuries.

Only authorized and trained personnel may operate this machine. This machine is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge.

It is the responsibility of the user to analyse the surface to be treated. The surface may not contain any substances which could pose a fire-, explosion- or health risk when treated. The user should make a risk assessment on the basis of the information obtained about the surface to be treated and take proper precautions for the work to be performed.

In case of any inappropriate usage, improper operation or repair, the producer shall be exempt from liability.

3.1 Work area safety

- a) Do not use the machine in rain, damp or wet locations.
- b) Avoid dangerous environments: do not work in the presence of explosive atmospheres, in the presence of flammable liquids, gases or dust. Remove materials or debris that may be ignited by sparks.
- c) In some cases sparks could be created by **scarifying or milling**.
- d) **The surface to be treated must be clean, make sure to remove all stones, screws etc..**
- e) **Do not use on wood.**
- f) Make sure there is enough ambient light on the work area. Cluttered or dark areas invite accidents.
- g) Keep children and bystanders away while operating the machine. They are likely not to foresee the potential dangers of the machine. Distractions could cause you to lose control of the machine.
- h) Persons who are not operating the machine must not be permitted to stay in the surrounding area of at least 5 meter from the machine.
- i) Never use the machine when the surface is not clear and if there is a risk of stumbling or tripping.
- j) Remove electrical cables and dust hose(s) from the surface to be treated.
- k) Make sure that there are no cables or hoses in the driving direction of the machine.
- l) Make sure that there is nothing standing or situated on the surface to be treated.
- m) Make sure the machine can travel over all inequalities on the surface, small inequalities like weld seams or (floor) joints are no barriers for the machine.
- n) **Never stay in the rain with the machine.**
- o) Check if there are any obstacles that can snag the cables when the machine is moving.
- p) Remove all objects from the surface that can damage the machine. Remove reinforcing steel or other objects protruding from the surface in order to prevent damage to the machine.
- q) **Warning! Make sure that the surface to be treated does not contain dangerous materials such as:**
 - **combustible or explosive dusts or substances.**
 - **carcinogenic or pathogenic substances.**
- r) It is necessary to provide for an adequate air change rate L in the room if the exhaust air from the dust collector is returned to the room. Comply with the National regulations.
- s) Secure the work area around the machine in public areas providing an adequate safety distance from the machine. Use a red and white safety chain and danger sign to enclose the work area.

3.2 Personal safety

- a) **Always wear Personal Protective Equipment while working with the machine.**
 - Dust mask class FFP3 or higher
 - Ear protection
 - Safety glasses with lateral protection
 - Protecting gloves
 - Safety shoes
- b) Dress properly. Do not wear loose clothing or jewellery. Keep your hair, clothing and gloves away from moving parts.
- c) Personnel must tie back long hair and not wear loose clothing or jewellery including rings.
- d) Stay alert, watch what you are doing and use common sense when operating the machine.
- e) The cord of the deadman switch key should always be fastened on your arm or on to your clothing.
- f) Pull out the key of the deadman switch before any inspections, adjustments and/or maintenance work is started. This will prevent unintentional start-up of the machine.



- g) Always seek professional medical attention immediately in case of injury.
- h) All persons surrounding the machine should wear Personal Protective Equipment.

3.3 Machine safety general

- a) Safety functions and operating functions must work correct.
- b) No loose bolts and nuts permitted.
- c) Never operate machine without the guards and/or safety devices in place.
- d) Never change anything on the safety devices on the machine!
- e) Do not use the machine when it is damaged.
- f) Do not **open** or **remove protective guards** while driving gears are running.
- g) The temperature of the machine can be above 37° C.
- h) The machine, specially the handle grips and control devices must be dry and free of fats/oils.
- i) All repair work has to be done by qualified Blastrac personnel, this guarantees a safe and reliable machine.
- j) Always use original Blastrac spare parts and cutters. This will ensure the best performance. Only original parts meet the factory specifications and quality. Otherwise Blastrac BV cannot guarantee the safety of the machine. The part numbers can be found in the Service Manual.
- k) Check the rotating direction of the motor before operation. The correct direction is given with an arrow on the housing of the motor.
- l) Make sure the drum with picks/cutters is in good condition and the picks/cutters can turn free in the drum.
- m) **In some cases sparks could be created by milling / scarifying.**
- n) If safety-critical changes occur to the machine or its working method, the machine must be shut down immediately! The cause of the fault must be established, and rectified.
- o) In the event of operational malfunctions the machine must be shut down immediately and secured!
- p) **Never use the machine without a suitable (Blastrac) dust collector!**

3.4 Electrical safety

- a) Use only extension cables for extending the main cable that are sized and marked in accordance with the overall power consumption of the machine. Do not use damaged extension cables.
- b) Electrical cables must be rolled entirely off of the reels.
- c) Any damage to the electric cables and/or electrical components is not permitted.
- d) If the power supply cable or plug is damaged, it must be replaced immediately. Only use original Blastrac parts.
- e) The voltage on the identification plate must comply with the power supply.
- f) Use an electrical power supply connection with earth connection and earth leakage circuit breaker.
- g) The circuit breaker of the power supply must have a "D" characteristic. Circuit breakers with a "C" or "B" characteristic can give problems when switching the machine on.
- h) **Keep the machine original; The machine is always equipped with an earthed connection, do not change this** and always use earthed cables with an earthed plug.
- i) Inspect and test the electrical components regularly. The electrical components have to satisfy with the requirements set out in the harmonised norm EN60204-1.
- j) Always call a skilled electrician or your distributor when you have questions about the safety of the electrical components.
- k) Work on electrical equipment or operating materials may only be undertaken by a skilled electrician or by trained persons under the guidance and supervision of a skilled electrician as well as in accordance with the electrical engineering regulations.
- l) Always use tools that are insulated against voltages.
- m) Do not abuse the cables. Never use the cables for carrying, pulling or unplugging the machine. Keep cables away from heat, oil, sharp edges or moving parts. Damaged or entangled cables increase the risk of electric shock. Do not fold the cable or clamp it.
- n) Don't pull out the power supply cable out by the wire, but by the connector.
- o) Be careful with water on the treated surface. Electrical cables must not come into contact with water.
- p) During a long standstill of the machine, pull out the main plug.
- q) If the machine is to be operated using power from a generator, the generator must be operated in accordance with the current legal regulations and directives in force. (this applies to the protective earth conductor in particular) in order to ensure that all safety devices are functioning and to eliminate possible damage to electrical components.



3.5 Petrol version safety

- a) **Read the enclosed Operating Instructions of the petrol engine before using it.**
- b) Make sure there is no oil or petrol leaking out of the petrol engine.
- c) Always make a pre-operation inspection before you start the engine. You may prevent an accident or equipment damage.
- d) Look for signs of damage and remove any excessive dirt or debris.
- e) To prevent fire hazards and to provide adequate ventilation, keep the engine at least 1 meter (3 feet) away from buildings and other equipment during operation. Do not place flammable objects close to the engine.
- f) Anyone who is not operating this machine must be kept away from the area of operation due to a possibility of **burns from hot engine components**. Parts will remain hot for a while after stopping the engine. Let the engine cool before transporting it or storing it indoors.
- g) When transporting or storing the engine, turn the fuel valve OFF and keep the engine horizontal.
- h) Know how to stop the engine quickly, and understand the operation of all controls. Never permit anyone to operate the engine without proper instructions.
- i) Do not place flammable objects such as gasoline, matches, etc., close to the engine while it is running. Do not place anything on the engine.
- j) Refuel in a well-ventilated area with the engine turned OFF. Gasoline is highly flammable and explosive under certain conditions. Let the engine cool before refueling.
- k) Do not overfill the fuel tank. There should be no fuel in the filler neck.
- l) Do not smoke or allow flames or sparks where the engine is refueled or where gasoline is stored.
- m) **! Exhaust gas contains poisonous carbon monoxide !** Avoid inhalation of exhaust gases. **Never run the engine in a closed garage or confined area!** Always wear a dust mask. Breathing carbon monoxide can cause unconsciousness or death.
- n) If any fuel is spilled, clean it up completely and allow petroleum vapours to dissipate before starting the engine.
- o) Make sure the fuel and oil level are correct and that the filler cap is closed securely.
- p) Don't leave the machine laying backwards for a long time, because this may result in fuel spillage.

3.6 Dust collector safety by a machine

- a) Always use a Blastrac dust collector to ensure a dust-free operation of the machine and clean air at the workspace. Also the airflow helps to cool the machine and prevents overheating.
- b) Read the operating instructions of the dust collector before using it.
- c) The dust container/bag of the dust collector must be emptied regularly. Comply with the local waste treatment regulations considering the removed material.
- d) The dust hose must be connected properly with a hose clamp and industrial tape.
- e) The dust hose must be undamaged and free of obstructions.
- f) Always switch on the dust collector first!


3.7 Maintenance safety

- a) Pull out the main plug and place it in sight, before changing the drum or starting inspections and repairing on the machine. Pull out the key of the dead man's switch and keep it in your pocket.
- b) Wait for a standstill of all drives before any inspections, adjustments and/or maintenance work is started.
- c) Block the machine in a stable position before doing any maintenance work.
- d) Failures due to inadequate or incorrect maintenance may generate very **high repair costs** and long standstill periods of the machine. **Regular** maintenance therefore is imperative.
- e) Operational safety and service life of the machine depends, among other things, on proper maintenance.
- f) Prevent premature wear by keeping the machine as dust free as possible. Clean the machine for this reason regularly with a dust collector and non-aggressive materials. Never use a high pressure water cleaner to clean the machine.
- g) Do not use any **aggressive** cleaning materials!
- h) Use lint-free **cleaning cloths!**
- i) Please advise the OWNER'S MANUAL of the petrol engine for additional information.
- j) It is advisable to stock all spare parts or wear parts that cannot be supplied quickly. As a rule, production standstill periods are more expensive than the cost for the corresponding spare part.
- k) The suitable precautions include decontamination before disassembling the machine, adequate filtered ventilation of the exhaust air from the room in which it is disassembled, cleaning of the maintenance area and suitable personal protection equipment.



3.8 Transport safety

- a) Be aware of your surroundings and machine operating level. Do not side hill, do not run on steep incline, this could cause machine to tip over.
- b) The weight of the BMP-265E is 175 kg, the BMP-265B is 190 kg. Use a crane or lift when transporting the machine, use the lifting eyes on the machine.
- c) Before every use check the lifting eyes and welds for: deformation, damages, cracks, corrosion and wear.
- d) When lifting the machine from the ground, always use the lowest lifting speed. The cables must first be tensioned at this speed; they must not be slack when the machine is lifted from the ground.
- e) During hoisting make sure to be at a safe distance from the machine with the most optimal view on the machine and working environment.
- f) Never stand directly below the machine.
- g) When transporting the machine do so in such a manner that damage due to the effects of the use of force or incorrect loading and unloading is avoided.
- h) The lifting eyes can also be used to fasten the machine on a pallet or during transport.
- i) Always drive backwards when driving up to a ramp or grade, and forwards when driving of the ramp.
- j) Chock wheels for transport and keep control handle in neutral position. use the brakes on the wheels.
- k) Don't leave the machine unsecured on jobsites.
- l) Park the machine always on a flat horizontal and levelled surface.
- m) Remove the dirt, dust and debris from the machine before transport.
- n) Make sure the electrical cable and dust hose are disconnected before transport.
- o) Store the cleaned and dry machine in a humid free room. Protect the motor from moisture, heat dust and shocks.
- p) Never use the machine for lifting persons or items.
- q) Only lift the machine as shown in the picture below.

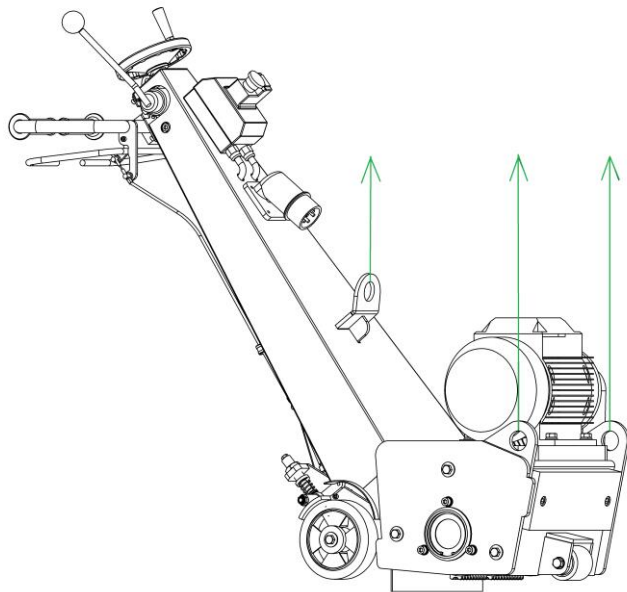



3.9 Signs on the machine

The following stickers are placed on the machine. Meanings of these symbols are:



! Danger Hazardous voltage in motor even when solid state controller is OFF. Disconnect main power before servicing motor, controller or associated wiring.



Warning! Hot surface



Lifting point.



Wear a dust mask class FFP2 or higher.



Hearing protection is obliged.



Safety glasses with lateral protection are obliged.



CE-mark on this machine.



Wear protecting gloves.




Safety shoes obliged.



Consult the manual before operating the machine.

Type plate:

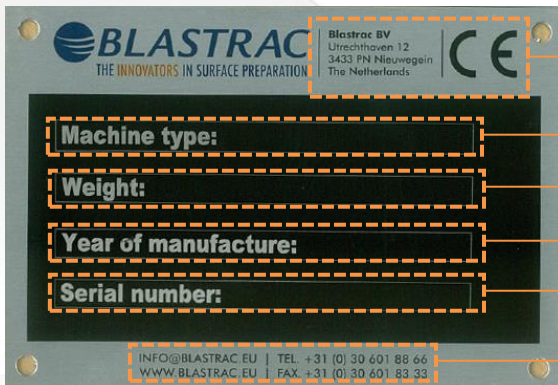

Name, address and CE mark.

The machine type.

The net weight of the machine in kilogram.

The year of manufacture.

The serial number of the machine.

Email address, Website, Telephone & fax number.

EU Declaration of Conformity:





4. Initial operation

Before using the machine it is of great importance to inspect the machine. It is not permitted to use the machine if the machine safety is not according to the checkpoints below.

4.1 Checkpoints electrical power supply

- Use only extension cables for extending the main cable that are sized and marked in accordance with the overall power consumption of the machine.
- Electrical cables must be fully unwound from their reels.
- No damage is permitted for electrical cables.
- Use an electrical power supply connection with earth connecting.
- Make sure the power supply is in accordance with the machine specifications.
- The circuit breaker of the power supply must have a "D" characteristic. Circuit breakers with a "C" or "B" characteristic can give problems when switching the machine on.
- If the machine is to be operated using power from a generator, the generator must be operated in accordance with the current legal regulations and directives in force. (this applies to the protective earth conductor in particular) in order to ensure that all safety devices are functioning and to eliminate possible damage to electrical components.


4.2 Checkpoints of the petrol engine

- Make sure there is enough petrol in the engine.
- Make sure there is enough oil in the engine.
- Check the engine for leakages of oil or petrol.

4.3 Checkpoints of machine

- Safety functions and operating functions must work correctly.
- Check all screws and other fasteners for tightness. No loose bolts and/or nuts are permitted.
- Check the electrical components, cables and connections for wear and/or damages.
- Dust hose connections must be reliable: use hose clamps and industrial tape.
- Dust hose must be undamaged and free of obstructions.
- Make sure the drum is in good condition.
- Make sure the drum is assembled as shown in the service manual.
- Check, when using non symmetric cutters, if the direction of turning is like the figure below.

The tools must hit the floor by centripetal force and not because the axle pushes the tool (see drawing below).

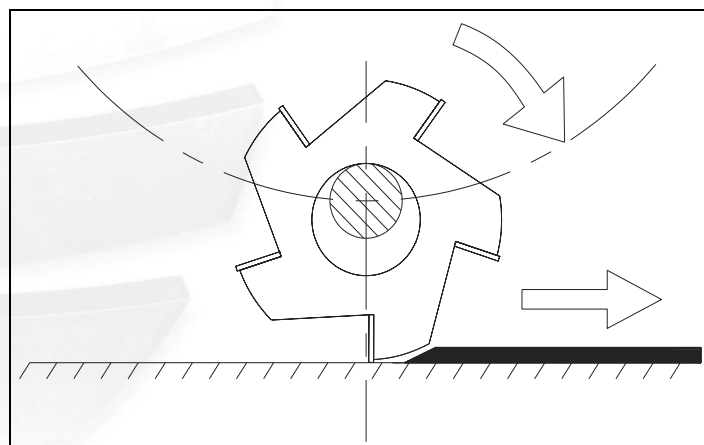



4.4 Manual moving of the machine

To move the machine squeeze in the brake handle of the machine until the brakes are released from the wheels. The machine can now be pushed around on its wheels.

The machine should only be moved around when the dust hose, and power supply cable are disconnected.

WARNING! Always make sure all rotating parts have come to a complete standstill before moving around the machine.

Be careful! Make sure nobodies feet get under the wheels. Wear appropriate safety shoes when you drive the machine to or from the work area.


Make sure that no vehicles, such as forklift trucks and other equipment run over the electric cable and the dust hose.

4.5 Removing the drum

Make sure all moving parts of the machine have come to a complete standstill before changing the drum. Pull out the key of the deadmansswitch.

Warning!
Always wear Personal Protective Equipment!
The dust can be hazardous to the health!
Wear a dust mask! Wear protective gloves!

1. Loosen the 3 bolts of the side plate
2. Remove the side plate (2)
3. Pull the drum from the axle, and support the drum.

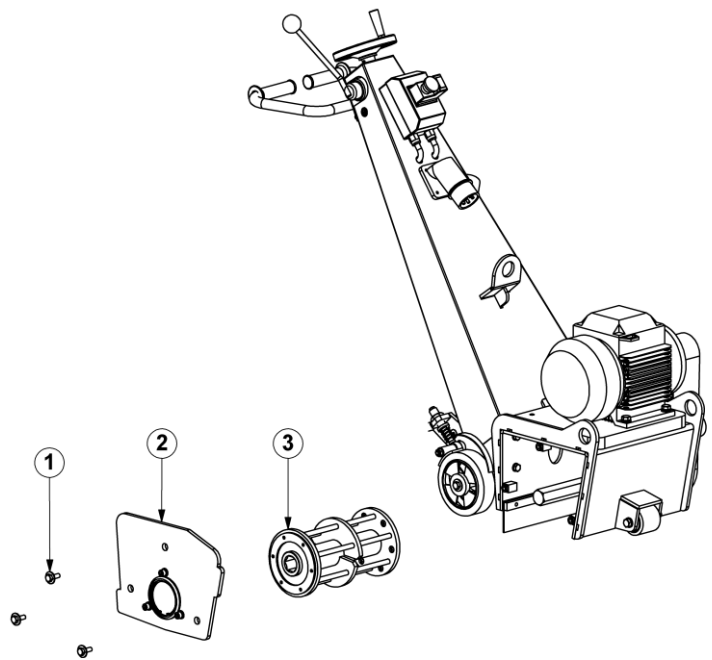

4.6 Mounting the drum



- Clean the hexagon axle inside the machine and lubricate it over the whole length.
- Slide the drum over the axle until it will not go any further.
- Mount the side plate. A side plate which is incorrectly mounted or mounted with force, will shorten the lifetime of the drum bearings.

Never use the machine without a side plate or with an incorrect mounted side plate!



4.7 The scarifying drum

The heart of the scarifier is the scarifying drum. The assembly of the scarifying drum is very easy. Each tool will be pushed on the axle together with spacers according to the enclosed assembly plans (Service manual). The spacers ensure the necessary distance between the flails or cutters. The enclosed assembly plans take into account the required lateral clearance of the flails or cutters, approximately 3 - 5 mm.

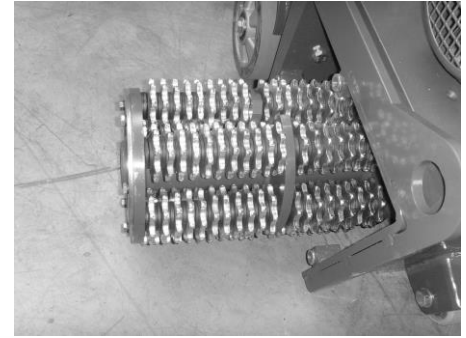
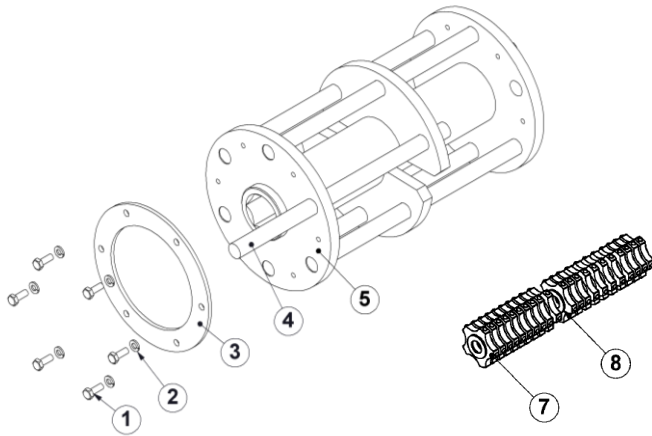


1	M6x16 hexagon head screw
2	M6 spring lock washer
3	Retaining plates
4	Axle
5	Drum
7	Scarifying flail or cutter
8	Spacer


4.8 The scarifying flails and cutters

Through the use of a few different flails or cutters, and with a few alterations, it is possible to adjust the Blastrac scarifier for the applications or rather for the requirements of the specific surfaces. All the machines work according to the principle of a loose tool seated on an axle. The rotation of the scarifying drum generates a centrifugal force on the flails or cutters which are kept by the lateral axles. The flails will be thrown outwards as far as the clearance between flail and axle allow it. When striking the surface, particles will be taken off of the surface and the flail will rebound in the max inner position. So to avoid significant wear on the axles as well as on the drum, it is required that the flails still have enough clearance on the axle when striking the surface.


The tools must hit the floor by centripetal force and not because the axle pushes the tool (see drawing below).

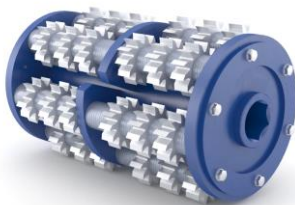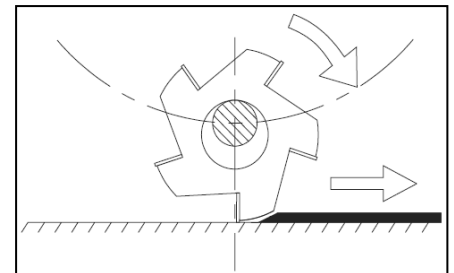

Complete drum with
MPL272 cutters.
Order nr. MPD265SL272S

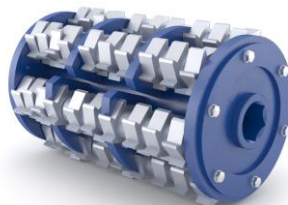

Complete drum with
MPL60-1 cutters.
Order nr. MPD265SL60

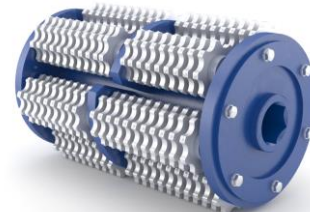


Complete drum with
MPL75-1 cutters.
Order nr. MPD265SL75S



4.9 Control devices

1	Brake handle
2	Quick lift lever
3	Fine adjustment
4	Dead mans switch
5	Stop button (E-version only)
6	Start button (E-version only)
7	Power connection plug (E-version only)
8	Dust hose connection

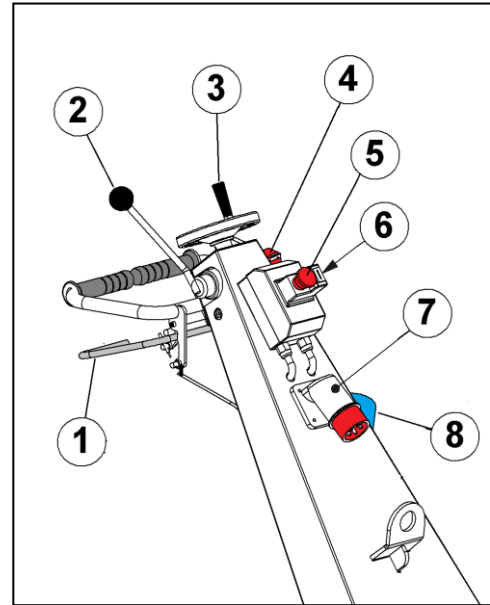

1. Brake Handle

In the neutral position the brakes are on the wheels, squeeze to take the brakes off. Make sure the handle is in the neutral position when starting up. Be very careful during operating of the machine. The rotating drum is 'driving' the machine forwards very strong!

2. Quick lift lever

In the upright position the drum is lifted off of the ground, in the downwards position, the drum is put on the ground. The quick lift lever enables the operator to lift the complete drum without changing the fine adjustment of the working depth, or for easy transport. The lever must be in the upright position before start-up, in order to prevent a run out of the motor under full load.

3. Fine adjustment

The working depth can be adjusted by turning the fine adjustment wheel. The scarifying depth must be adjusted considering the surface to be treated. The flails or cutters must be unhindered thrown up through the centrifugal force and they must turn free over the lateral axle. When the depth adjustment is correctly selected, the scarifier will run quiet and constant. Oval worn flails or cutters as well as broken drum axles indicate a too "high" scarifying depth adjustment.

4. Dead man's switch

The key of the dead man's switch is attached to a cord. The cord should be fastened on the arm of the operator. When the key is pulled out, the machine will stop immediately.

5. Stop button

Red mushroom-shaped shutdown push button, this button cuts off the power to the motor. Turn to unlock the stop button.

6. Start button

Pressing the black start button will start the electrical motor, and the drum will start rotating.

7. Power connection plug

Connection for electrical power. The plug has a built in phase inverter for easy and quick changing of the phases if the electrical motor turns in the wrong direction.

8. Dust hose connection

The dust hose to the dust collector must be connected here. Use hose clamps and industrial tape for a reliable connection.



5. Operating

During operating the BMP-265, the following additional safety instructions must be followed closely. Before switching on the machine make sure that no-one can be endangered when the machine starts up.

All persons in the proximity of the machine must wear safety glasses with lateral protection as well as safety shoes and ear protection. The operator is obliged to wear close-fitting protective clothing and a dust mask.

5.1 Before starting up

- Make sure that the drum doesn't hit the ground. The quick lift lever must be in upper position and the fine adjustment must be turned up.
- Connect the scarifier and the dust collector with the dust hose. Make sure there is a good and airtight connection, use hose clamps and industrial tape.
- Connect the scarifier and the dust collector with the power supply. Make sure the right connection is available for the machines. (only BMP-265E)

5.2 Procedure to start work


- Turn on the dust collector
- Put the cord of the deadman switch around the left wrist.
- Start the machine by pushing the black button (BMP-265E) or by pulling the start cord of the petrol motor. (BMP-265B)
The throttle lever of the petrol engine is fixed to run at the correct RPM.
- Check if the drum turns the right direction. (Only BMP-265E)
- Slowly let down the quick lift lever.
- Turn the fine adjustment clockwise till the desired scarifying depth is reached.
- Squeeze in the brake handle to make the machine go forward.

5.3 Operating during scarifying

During scarifying there has to be a light pressure on the steering handle. This will ensure maximum grip on the back wheels. Do not pull on the steering handle because this will cause the rear wheels to skid, and also increases the change of operator fatigue.

Pull the brake handle only when the machine progress is obstructed, by for example sandy subsoil.

Carry out work in parallel tracks in such a way that the dust hose and electric cable do not become twisted. The next figure shows the recommended working paths leading away from the dust collector.

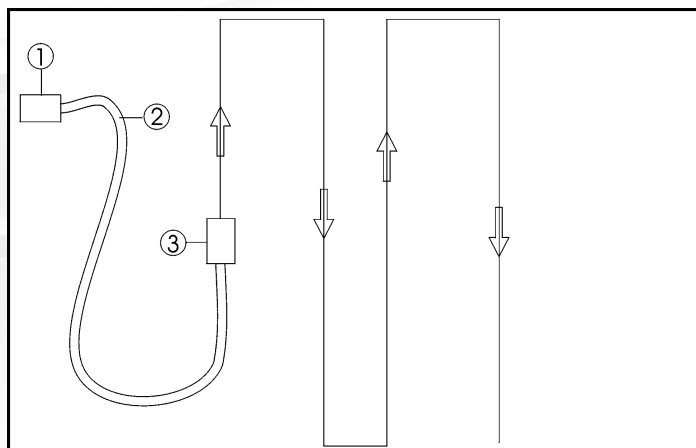

1	Dust collector
2	Dust hose and electric cable
3	Scarifying / milling machine



Make sure that no vehicles, such as forklift trucks and other equipment run over the electric cable and the dust hose.

The selection of the correct advancing speed of the machine is important for a good result. In the case that the surface has different characteristics (e.g. different hardness or different coating thicknesses), a uniform result can be achieved by varying the advancing speed during scarifying / milling.

The advancing speed depends on the material of the surface to be treated and the desired profiling.

The correct advancing speed can be found out by observing the treated surface and varying the speed during the scarifying / milling process.

Slight profiling on concrete requires a higher speed than coarse profiling.

5.4 Switching off the machine

- Pull the quick lift lever up and turn the fine adjustment until the drum does not hit the ground anymore.
- Push the red button (BMP-265E) or switch the On-Off button at the front of the petrol motor to Off. (BMP-265B)
- Switch off the dust collector.
- Disconnect the power supply.
- Pay attention that all twisting and turning machine parts have reached a standstill before inspection or maintenance duties are carried out.



6. Maintenance

Please read the OWNER'S MANUAL of the petrol engine for the proper maintenance schedules.

Pay attention to Chapter 3 "**Safety**" during maintenance and repair works.

Failures due to inadequate or incorrect maintenance may generate very **high repair costs** and long standstill periods of the machine. **Regular** maintenance therefore is imperative.

Operational safety and service life of the machine depends, among other things, on proper maintenance.

The following table shows recommendations about time, inspection and maintenance for the normal use of the machine.

Operating hours/ time period	Inspection points, maintenance instructions
12 h after repairing	Check all accessible screw connections for tight seat.
Daily and prior to starting work	Check that all safety devices working adequate. Check whether there is any foreign matter in the scarifying drum. Clean the scarifying drum specially in case of moist surfaces. Check the scarifying drum, lateral axles, tools and housing for wear. Check the tension of the belt, stretch again if necessary. Check the electric connections for sediments of dirt or foreign bodies. Check the electric motors for dirt and other contaminants. Check all safety devices working adequate. Check the function of the residual current operated device. Check the hose connections for tightness and fixed seat. Make sure that the dust bin is emptied
Annually	Full overhaul and cleaning of the complete machine.

The time indications are based on uninterrupted operation. When the indicated number of working hours is not achieved during the corresponding period, the period can be extended. However a full overhaul must be carried out at least once a year.

Due to different working conditions it can't be foreseen how frequently inspections for wear check's, inspection, maintenance and repair works ought to be carried out. Prepare a suitable inspection schedule considering your own working conditions and experience.

Pay attention to unusual noises or strong vibrations. Check for the cause of every big change. Call a technician if you have doubts about the cause or when a repair without a technician seems not possible without damages. Only use genuine Blastrac spare parts.

Our specialists will be happy to assist you with more advice.

Prior to any repair works on the machine and its drives, secure the machine against unintentional switching on. Put the machine to its safety off position.

The machine is in a safe condition when it cannot generate any hazard.

Follow additional operating and maintenance instructions of Original Equipment Manufacturer if included during your service and maintenance work.

Further is advised:

Store the cleaned and dry machine in a dry and humid free room. Protect the electrical motors from moisture, heat, dust and shocks.



All repair work must to be done by qualified Blastrac personnel, this to guarantee a safe and reliable machine.

Any guarantee on the machine is expired when:

- Non original Blastrac parts have been used
- Repair work is not done by qualified Blastrac personnel
- Changes, add on's or conversions are undertaken without written permission of Blastrac BV

Screws, bolts etc. that have been removed must be replaced with those of the same quality, strength, material and design.

Do not weld, flame cut or perform grinding works on or near the machine. Danger of fire or explosion exists!
Provide adequate ventilation when working in a confined space.
Secure the maintenance area if necessary.

6.1 The scarifying drum

The scarifying drum is a very important component of your scarifier, so you should pay special attention while maintaining and repairing.


The main shaft has to be cleaned and lubricated when you replace the scarifying drum, so that any rust or sediment can't complicate your work when you change the drum the next time.

If the scarifier drum should be disassembled in order to rearrange it in a different way or to replace wear parts, it is absolute necessary to observe the quantity and quality of flails / cutters and spacers as described in the assembly plans shown in the service manual. Also, pay attention that the bores on the cover plate for the lateral axle are not worn out and all screws are tightened. In order to obtain a uniform and perfect scarifying pattern on the surface, you need to adjust the correct scarifying working depth, check the correct assembly of the scarifying drum as well as the appropriate selection of tools for the surface to be treated.

If the scarifying drum is not uniformly assembled the machine will become unbalanced and excessive wear, will arise. Blastrac will not feel responsible for any faulty parts, that are damaged caused by inappropriate assembly.

6.2 Adjusting brake pressure

The brake pressure must be adjusted when the pressure is to low or to high. Loosen the both M20 nuts (1) and turn the M8 bolt (2) upwards to lower the pressure or downwards to apply more pressure. Both sides must be adjusted equally to ensure the machine will not pull out of direction position. Tighten both M20 nuts (1) when the optimal brake pressure is reached.

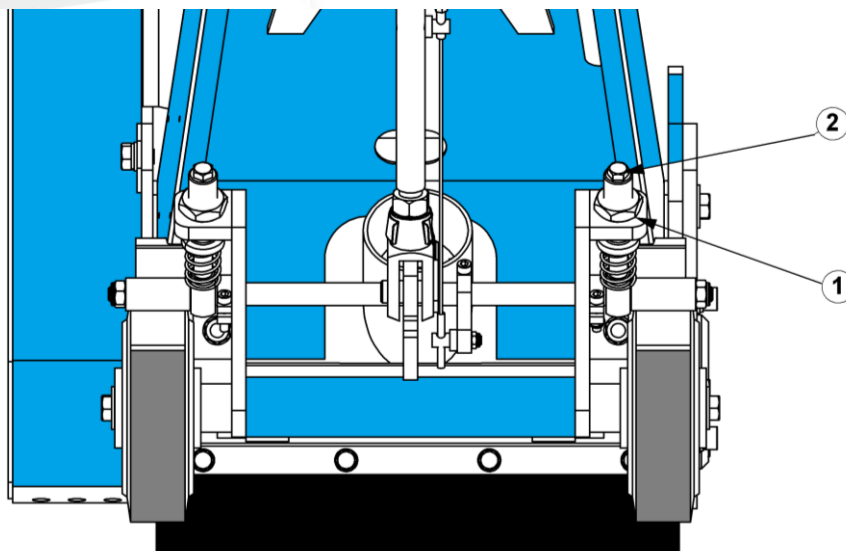




6.3 Belt drive

1	Motor
2	Tension pulley
3	Belt

The correct belt tension is of utmost importance in order to obtain a perfect power transmission and to reach the usual working life of the belt. Too low or too high tension causes frequently a premature breakdown of the belt. Excessive belt tension results in damaged bearings at drives or scarifying drums. If you change the horizontal position of the tension pulley (2), the tension of the belt can be adjusted.

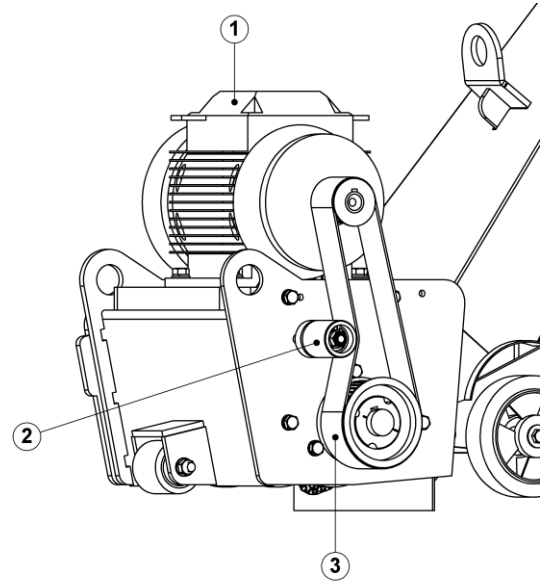

7. Troubleshooting

Fault	Possible cause	Remedy
Excessive vibration or/and Unusual noises	Imbalance due to worn or broken tools. Defective bearing. Wrong tension of the belt. Defective motor	Replace all worn or broken parts. Check the bearing on the axle drive shaft and replace if necessary. Check the tension of the belt, replace the belt if necessary. Replace the motor
Reduced or no scarifying performance	Tools have reached the maximum permissible wear. Inappropriate tools for the application. In case of internal combustion engine, follow the information of the manufacturer	Replace the worn parts. Replace the tools with appropriate tools for the surface to be treated.
Motor does not switch on	Missed phase Defective Component.	Check the mains power supply and try to switch on again. Find fault and replace defective component. Follow the enclosed information of the manufacturer
Motor triggers while running	Motor protections switch triggered because of overload . Motor has a defect.	Reduce additional load . Check the motor.



8. Technical data

	BMP-265E 3x400V	BMP-265E 3x230V	BMP-265B
Power consumption	5.5 kW	5.5/6.4kW	6 kW
Electrical connection / fuel	3x400V 50 Hz	3x230V 50/60Hz	Combustion engine Unleaded petrol
Amperage / lubricant	10.5 A	10.4	SAE 10W-30
Working width	265 mm	265 mm	265 mm
Rotation speed drum	1440 min ⁻¹	1330/1560 min ⁻¹	1440 min ⁻¹
Length	1260 mm	1260 mm	1260 mm
Width	500 mm	500 mm	500 mm
Height	1160 mm	1160 mm	1160 mm
Weight	175 kg	175 kg	190 kg
Noise emission level (Under load) Uncertainty	96 dB(A) 5 dB(A)	96 dB(A) 5 dB(A)	96 dB(A) 5 dB(A)
Sound power level (Under load) Uncertainty	115 dB(A) 5 dB(A)	115 dB(A) 5 dB(A)	115 dB(A) 5 dB(A)
Vibration level (Hand-arm)	5.1 m/s ²	5.1 m/s ²	6.3 m/s ²
Ambient temperature	-5°C ~ 40°C	-5°C ~ 40°C	-5°C ~ 40°C
Dust hose connection	Ø75 mm	Ø75 mm	Ø75 mm
Suitable filter unit	Contact Blastrac BV We will assist you with a good advice		

Design and specifications are subject to change without notice by Blastrac BV.

IMPORTANT NOTES:

Noise and vibration measurements were taken during heavy operation on concrete. The noise and vibration levels depend on the working depth, which is in turn determined by the unevenness of the surface. The impact force of the tools onto the surface is the biggest factor in both noise and vibration levels.

The indicated values are measured on new machines. Noise and vibration levels will vary in different circumstances. Area influences like open outside or closed inside space, ambient temperature, different surfaces to be treated, daily use, different tools or accessories, poor maintenance, etc. will give different values at all time and could increase the exposure level over the total working period.

The declared vibration and noise emission levels represent the main applications of the machine. The values may be measurements from a representative sample of technically comparable machinery. The values may be used for a preliminary assessment of exposure.

A precise estimation of the level of exposure to vibration and noise should also take in account the times when the machine is switched off or even running, but not actually in use. This may significantly decrease the exposure level over the total working period.



Identify additional safety measures to protect the operator from the effects of vibration and noise such as: proper and regular maintenance of the machine and the accessories, keeping the hands warm, provision of proper ear protection and organization of work patterns for example by using rotation schedules. The use of anti-vibration gloves could also decrease the effects of the vibrations transmitted.

Always use ear protection when working with this machine.

Because the value is above 2,5 m/s², we recommend taking measures to decrease hand-arm vibrations.

Tips for decreasing the exposure to hand- arm vibrations:

- Protect the hands with vibration dampening gloves
E12000 – Blastrac Anti-vibration gloves
- Switch off the motor when driving backwards
- Check and replace the tools regularly
- Proper maintenance of the machine
- Scheduled replacement of the shock absorbing machine parts
- Keep the hands warm
- Prepare a work schedule and plan in rest periods

Old equipment contains valuable materials which are valuable for re-processing. **The machine parts must not be thrown away in the normal household waste**, but should be disposed of at a suitable proper collection system, e. g. via your communal disposal location. This way the materials can be re-used in an environmentally responsible manner.

Despite the fact that this guide is made with care, Blastrac takes no liability for errors in the manual and the possible consequences. We are naturally very interested in your findings and additions. No part of this publication may be reproduced and / or published in print, photocopy, or other form without prior permission by Blastrac.



BLASTRAC EUROPE

WE'RE READY TO ASSIST YOU!

BLASTRAC THE NETHERLANDS

EUROPEAN HEAD OFFICE

Utrechthaven 12
NL - 3433 PN Nieuwegein
Tel.: +31 (0)30 601 88 66
Fax: +31 (0)30 601 83 33
Email: info@blastrac.nl
WWW.BLASTRAC.EU

BLASTRAC POLAND

SALES & SERVICE CENTRE

Golina, ul. Dworcowa 47E
63-200 Jarocin
Tel.: +48 (0)62 740-41-50
Fax: +48(0)62 740-41-51
Email: info@blastrac.pl
WWW.BLASTRAC.PL

BLASTRAC FRANCE

SALES & SERVICE CENTRE

ZI - 29, Av. des Temps Modernes
F - 86360 Chasseneuil du Poitou
Tel.: +33 (0)5 49 00 49 20
Fax: +33 (0)5 49 00 49 21
Email: info@blastrac.fr
WWW.BLASTRAC.FR

BLASTRAC ITALY

SALES & SERVICE CENTRE

S.S. 10 Padana Inferiore, 41
IT - 29012 Caorso (PC)
Tel.: +39 0523 814241
Fax: +39 0523 814245
Email: info@blastrac.it
WWW.BLASTRAC.IT

BLASTRAC GERMANY

SALES & SERVICE CENTRE

Richard-Byrd-Str. 15
50829 Köln
Tel.: +49 (0) 221 709032-0
Fax: +49 (0) 221 709032-22
Email: info@blastrac.de
WWW.BLASTRAC.DE

BLASTRAC UKRAINE

SALES & SERVICE CENTRE

Nezalezhnosti 14, of. 21
07400 Brovary
Tel.: +38 (0)44 222 51 28
Fax: +38 (0)44 277 98 29
Email: info@blastrac.com.ua
WWW.BLASTRAC.COM.UA

BLASTRAC SPAIN

SALES & SERVICE CENTRE

Calle del Estío, 9
E - 28500
Arganda del Rey, Madrid
Tel.: +34 91 660 10 65
Fax: +34 91 672 72 11
Email: info@blastrac.es
WWW.BLASTRAC.ES

BLASTRAC UNITED KINGDOM

SALES & SERVICE CENTRE

Unit 2a, Outgang Lane, Dinnington
Sheffield, South Yorkshire
GB - S25 3QY
Tel.: +44 (0) 1909 / 569 118
Fax: +44 (0) 1909 / 567 570
Email: info@blastrac.co.uk
WWW.BLASTRAC.CO.UK

BLASTRAC MIDDLE EAST

SALES & SERVICE CENTRE

P.O. box 29424
Dubai / United Arab Emirates
Tel.: +971 4 3245760
Fax: +971 4 3245761
Email: info@blastracdxb.ae
WWW.BLASTRAC.AE

BLASTRAC INDIA

SALES & SERVICE CENTRE

G.B. Warehousing, GAT NO- 523,
Pune- Nagar Road, Wagholi
Pune- 412 207
Tel.: +91 99213 98109
Email: info.blastrac.in
WWW.BLASTRAC.IN